

Zebra[®] Diverter[™] Manual



Installation Instructions

1. Attach the Diverter as shown for use with either the Sidewinder[™] or Belt Skimmer Oil Skimmers (Fig. 1 or 2)
2. Secure the Diverter and skimmer unit to your machine, making sure it is level.
3. Fill the separator tank with mixed coolant (about 2 cups). To verify the unit is level for proper operation, keep adding coolant until it forms a lip around the coolant elbow rim (in the smaller of the two reservoirs). The coolant should be about 1/16" (2mm) beneath the oil rim outlet (in the larger of the two reservoirs).
4. Use the 4" nipple pipe fittings to direct the oil side to a discharge container, and the clean coolant back to the sump. NOTE: The brass fittings on the inside of each of the reservoirs need to be kept parallel to the top of the separation tank.
5. Plug the skimming unit into the appropriate outlet and let it work!
CAUTION: The Diverter is only designed to handle the small amounts of oil caused under normal conditions - approximately 2 qts. oil output per hour.

VISIT
WWW.COOLANTMAINTENANCE.COM
FOR CLEAN COOLANT TIPS

Warranty

✓ One year warranty

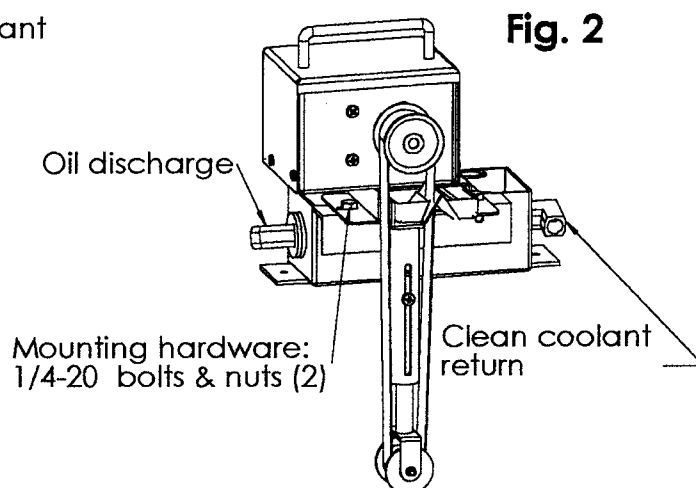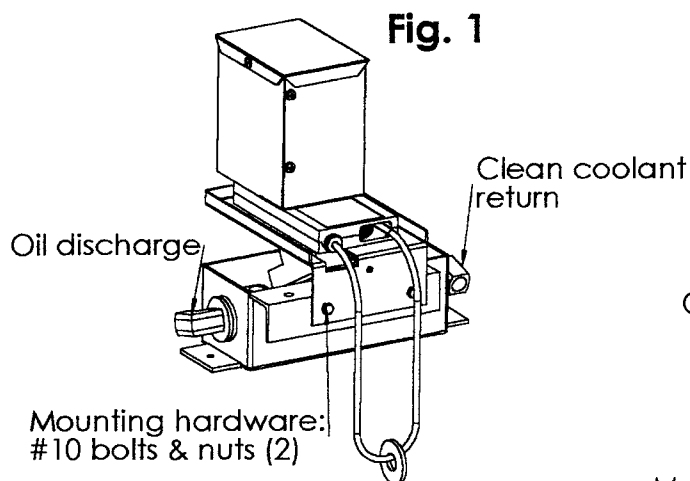

If you have any questions or require product support, please contact 888-249-4855



Quality Coolant Performance Products • Skimmers, aerators, mixers, filtration and treatment systems.

© January 2008 Zebra Skimmers Corp • All rights reserved • POBox 833 Chagrin Falls, OH 44022
www.ZebraSkimmers.com • Toll Free 888-249-4855 Phone:440.349.0141 Fax: 440.349.1211